


PANEL LIGHT (600*600MM 36W)

PARAMETER:

- **Type: LQ-PL0606-36W**
- **Power: 36W**
- **QTY of LED: 360 pcs**
- **LED type: 3528 SMD LED**
- **Input Voltage: 175V-265V AC /50-60HZ**
- **Color: Warm white/Natural white/Cool white**
- **Luminous Flux: 2520 LM**
- **Rendering index: >75**
- **Power Efficiency: ≥85%**
- **Power factor: ≥0.9**
- **No UV or IR light radiation**
- **Temperature rising: < 20 °C**
- **Working environment: -40 °C-+50 °C**
- **Working environment humidity: 10% ~80%**
- **Luminance decrease: keep lighting 5,000hrs decrease 2.4%**
- **Life time: >50,000 hrs**
- **Fixture Material: Oxidized Aluminum + High Quality PMMA (Acrylic)**
- **IP grade: IP44**
- **Protection grade: IK04**
- **Insulation class: CLASS II**
- **Certificate: CE, RoHS**
- **Net weight: 3.6 kg**
- **Dimension: 595*595*9mm**

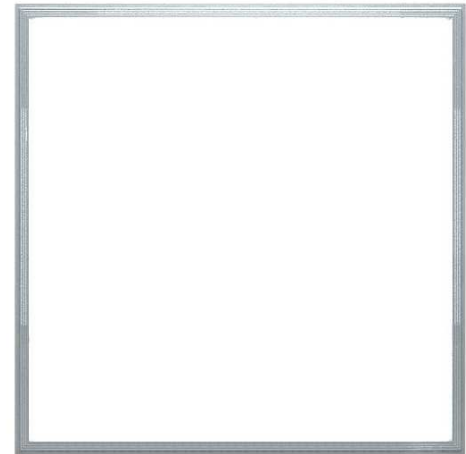



PACKING SPECIFICATION:

- **One panel in an Inner box, one master carton contain 5 inner boxes**
- **Inner Carton Size: 66.5CM X 62.5CM X 4CM**
- **Inner Carton N.W.: 4.3KG**
- **Master Carton Size: 69CM X 64CM X 22CM**
- **Master Carton N.W.: 24KG**

HOW TO INSTALL

1. Fix the panel light to the ceiling


- A. Replace the false ceilings that are identical size as the panel.

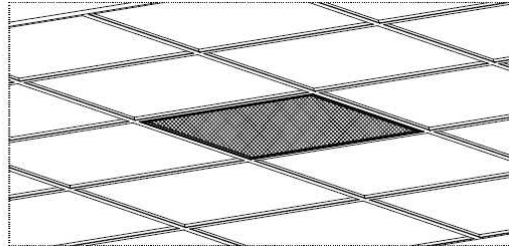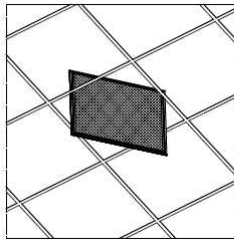

- Take off the false ceiling, put in the panel from diagonal


- b. Fix the panel at the right place

- B. Ceiling mounted

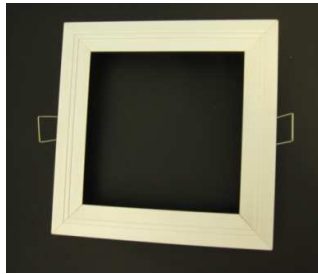

- Mount the ceiling frame to the hole, fix the panel light as showed in the above

2. Fix the panel light on the wall

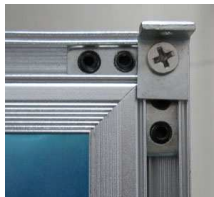

- Fix the wall frame to the wall with screws;
- Put the driver into it;
- Screw the panel on four angle of the frame.

● **3. Hang the panel light under the ceiling**



- ***Fix the hanging rope to the ceiling, then screw the Hanger into the threads in the four angles of the panel, adjust to the proper height.***